



# DualShock 4 Buttons Replacement

Replace/ clean the buttons on your Dualshock 4 controller.

Written By: Mark



## INTRODUCTION

Use this guide to replace or fix any buttons on the Dualshock 4 controller.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Essential Electronics Toolkit](#) (1)



### PARTS:

- [DualShock 4 Controller Home Button Cover](#) (1)
- [DualShock 4 Controller Action Button Covers](#) (1)
- [DualShock 4 Controller D-Pad Button Cover](#) (1)

## Step 1 — Controller



- Using the Phillips #00 Screwdriver, remove the four 6.0 mm screws securing the rear cover to the controller.


⚠ Do not forcefully loosen the screws, as it will amount to permanent damage of the threads, making removal impossible.

## Step 2



- Beginning with the **left shoulder**:
  - Pinch the left shoulder of the controller to introduce an opening.
  - Wedge a plastic opening tool into the opening and slide it up towards the joystick.
  - Pull down on the plier to crack open the casing.
- Repeat these steps for the **right shoulder**.

## Step 3

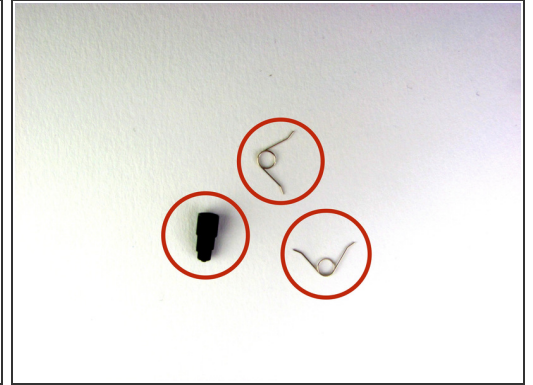

- Wedge a plastic opening tool into the case-splittings and pull down to crack open the casing near the following buttons:
  - **Share** button
  - **Options** button
- Split the plastic covers of the controller apart, taking note that they will still be attached by circuit board ribbons.
- ⓘ Three small pieces are often released from the framework. To prevent loss, maintain a controlled work field.
  - 2 Trigger Springs
  - 1 Grey Reset Button Extension




## Step 4 — Battery



- Detach the motherboard ribbon connecting the two sides of the controller by using your fingers.
- After the two halves are separated, place the top of the controller off to the side.


## Step 5

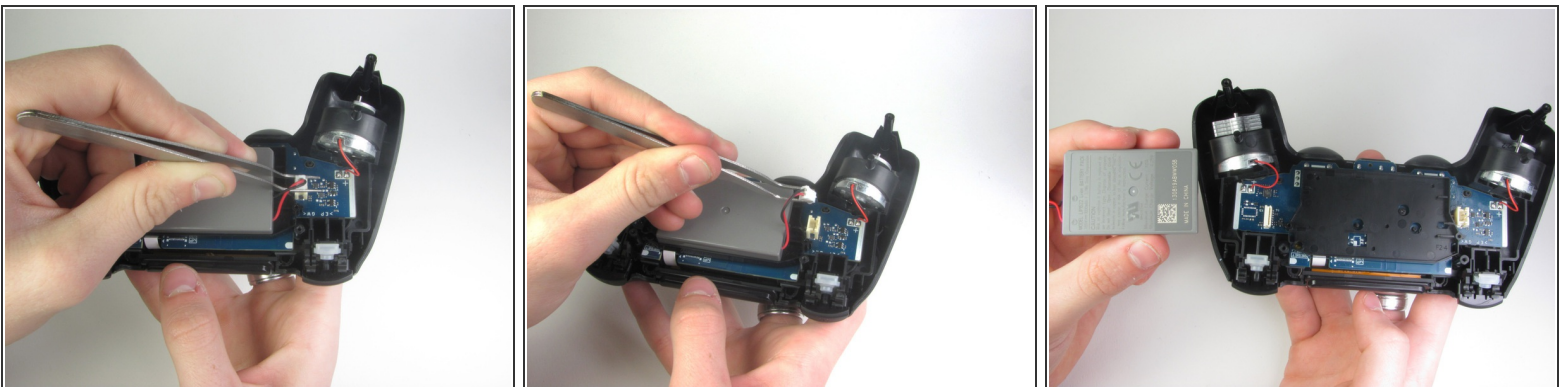

- Using the blunt forceps, remove the battery plug by gently rocking the forceps side-by-side to loosen the plug.
- After removal of the plug from the motherboard, the battery can be lifted off of the controller.

⚠ Hasty removal of the battery plug could warp the plastic grips of the plug.



## Step 6 — Disassembling DualShock 4 Motherboard Assembly

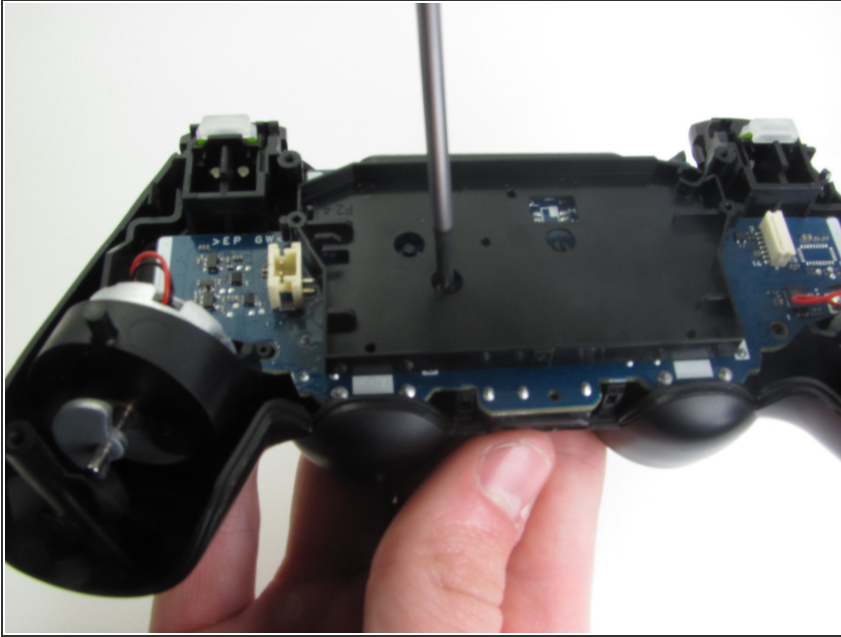

- Remove the single 6.0 mm Phillips screw found below the battery retainer with the Phillips #00 Screwdriver.



⚠ Do not forcefully loosen the screw, as it may amount to permanent damage of the threads, making removal impossible.

## Step 7

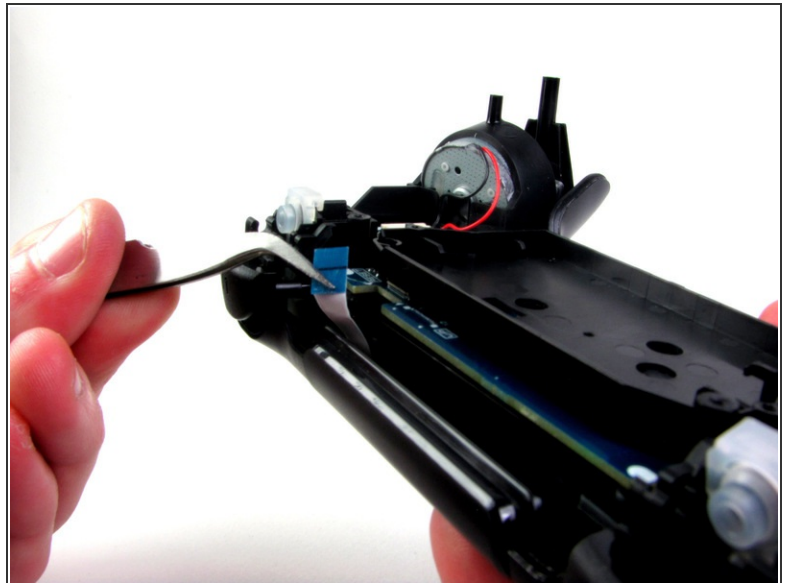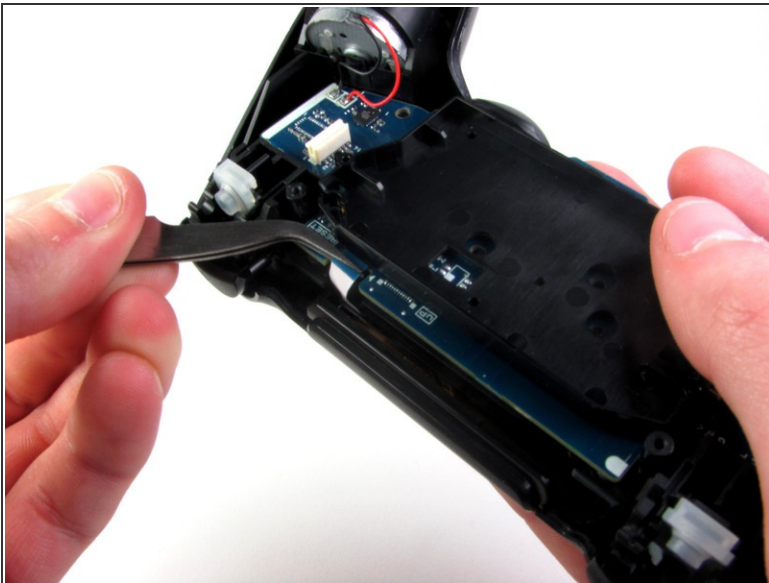

- Gently detach the touchpad ribbon connected to the motherboard using the blunt forceps. The touchpad ribbon is connected to the motherboard by a connector that flips to tighten and loosen. During reassembly, to reattach the ribbon, the plastic tray will need to be gently removed from the motherboard and the flip-lock flipped up.

## Step 8

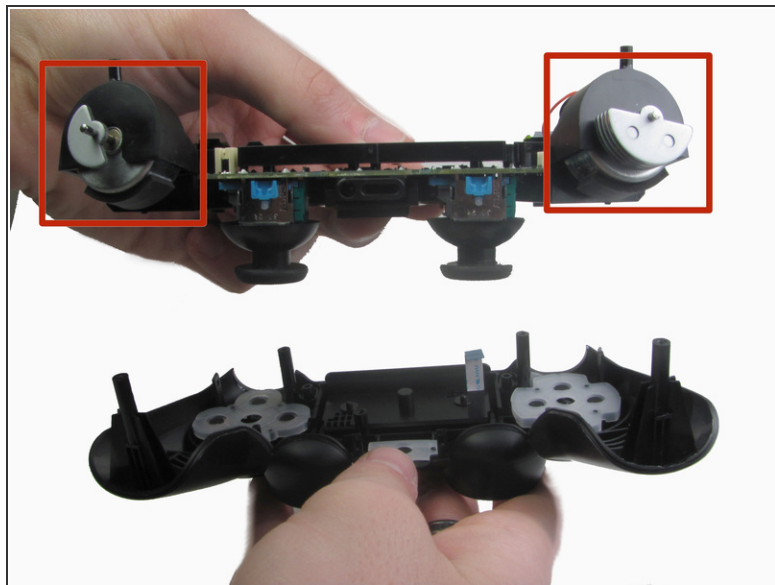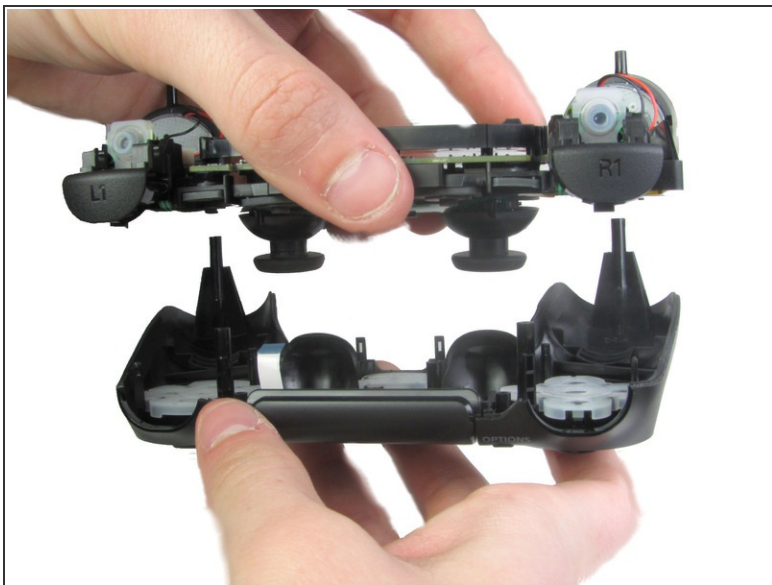

- Carefully dislodge the motherboard assembly from the front cover.
  - Vibration motors are loosely attached to the motherboard assembly. Provide support at the two ends to ease the separation.
- ⓘ When removing the motherboard assembly, try not to tilt the front cover upside down as the buttons and their covers may fall out.



## Step 9 — Disassembly Complete



- Successful disassembly of the controller will result in the following three parts, respectively:
  - Motherboard Assembly
  - Front Cover
  - Rear Cover



## Step 10 — Buttons



- Remove the rubber covering concealing the buttons with your fingers.
- Use the metal tweezers to then remove the button from its slot.





## Step 11

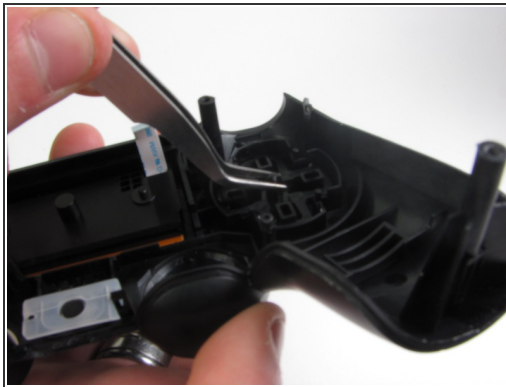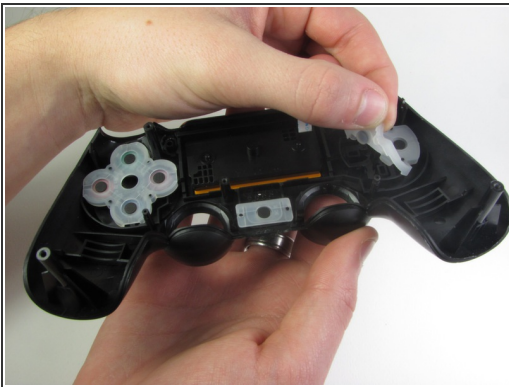


- To remove the arrow key buttons, use the same process you used for the control buttons by removing the rubber cover and pulling the button out with metal tweezers.

## Step 12

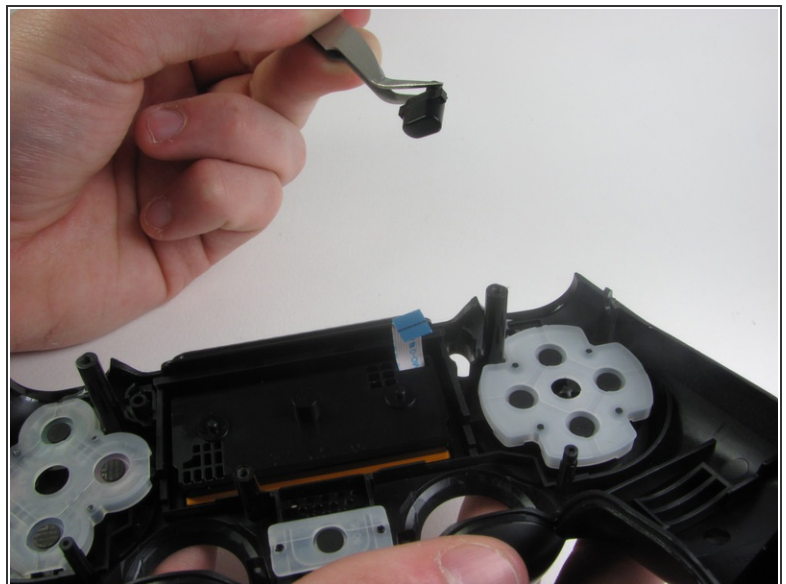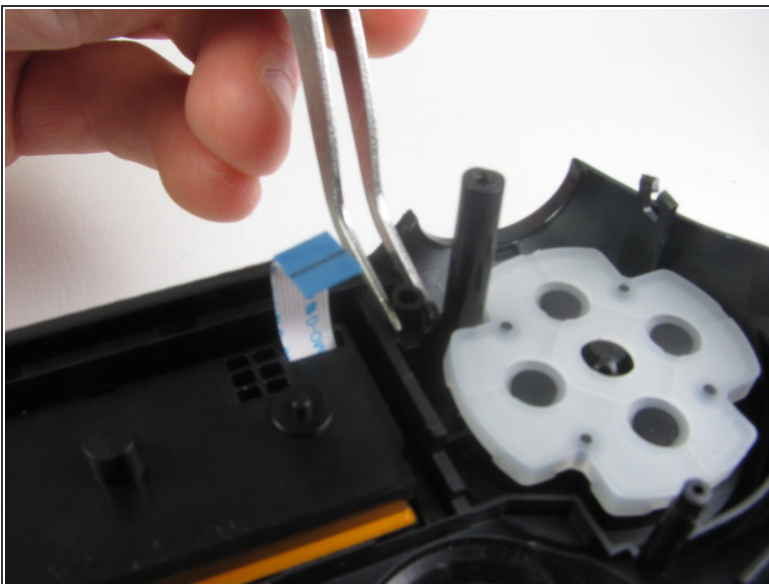

- For the share and options buttons, use the metal tweezers to grasp and remove them.

## Step 13

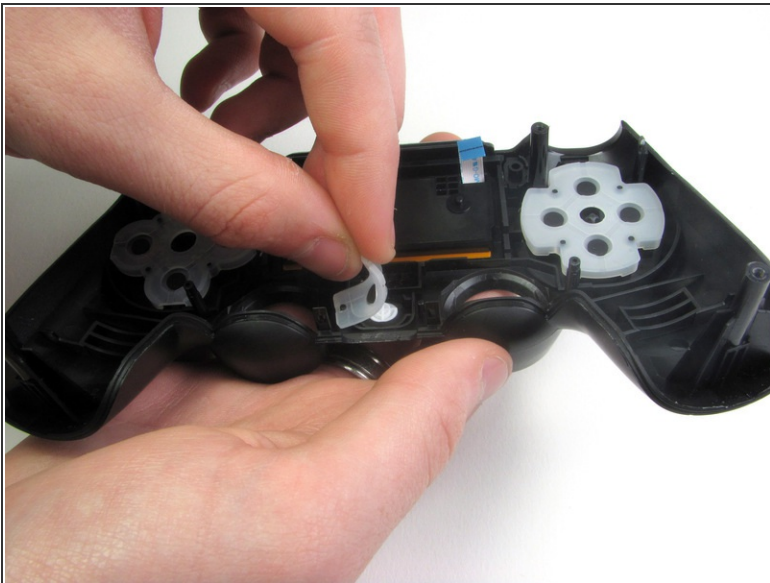

- In order to remove the PS button on the controller, you must first remove the rubber cover with your fingers.
- Then using the metal tweezers, remove the PS button.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-20 11:29:08 AM.